BERG
HORTIMOTIVE

Buttons and switches

Off

On

1 Main switch

2 Foot pedal

3 Lift wheels

4 Cruise control

5 Door
(push to open)

5

6-11

5

3

4

2

1
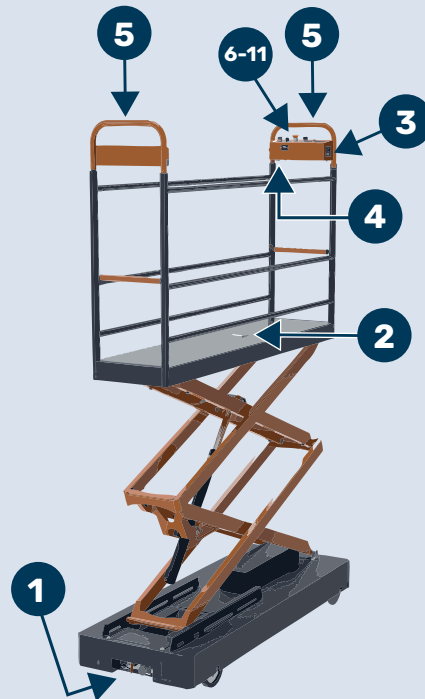
Control panel
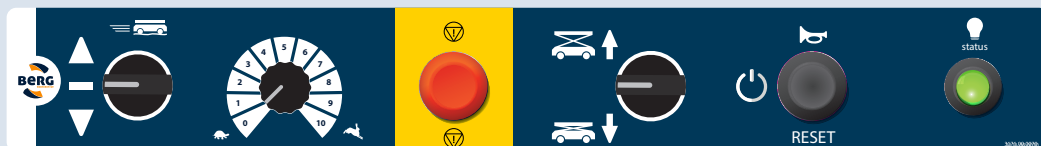
status

RESET

6 Direction button

7 Speed button

8 Emergency button

9 Platform button

10 On/claxon / reset

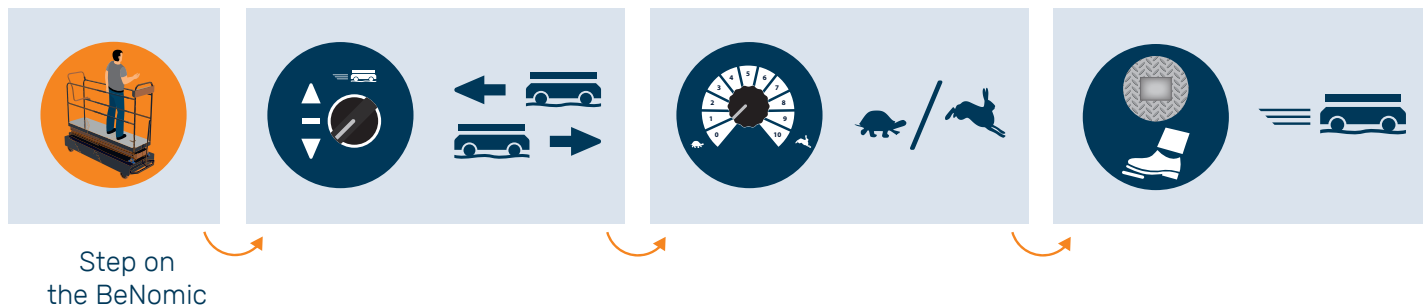**11** Status light

Start here

Switch on

status

RESET
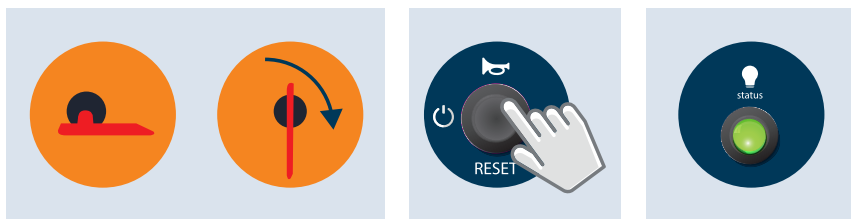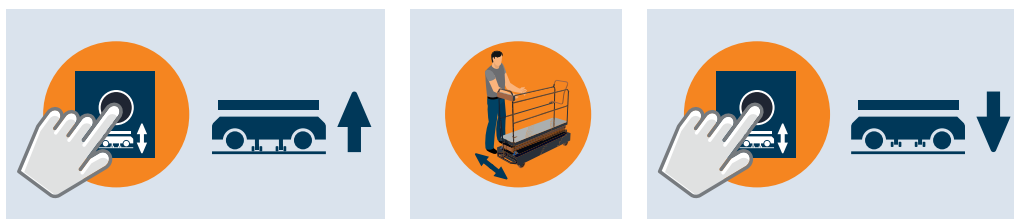
Move

Lift wheels

Now you can move the machine

Lower wheels

Drive

Step on
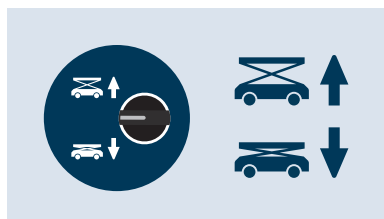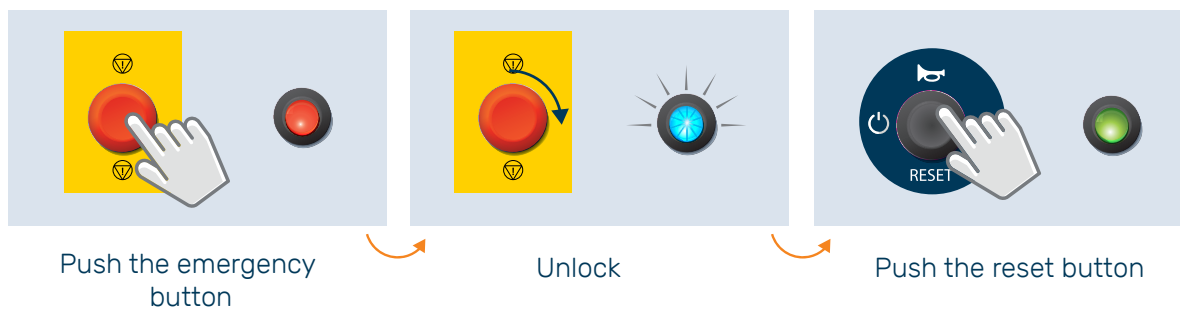the BeNomic

Cruise control
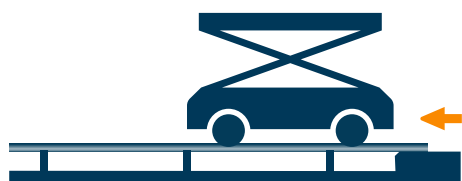
First drive onto the pipe rail

Push this button for
cruise control on/off

Start driving

Standby
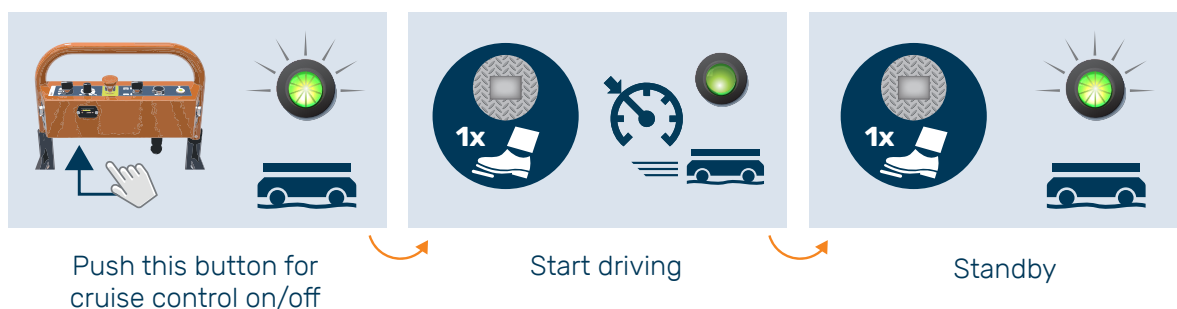
Platform up and down

Emercency stop

Push the emergency
button

Unlock

Push the reset button

Tilt indication

Overload indication

Max. load

5 x

5 sec.

Battery empty

2 x
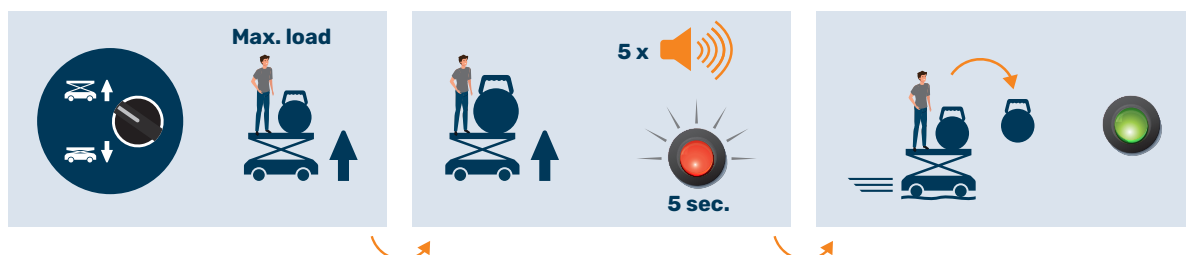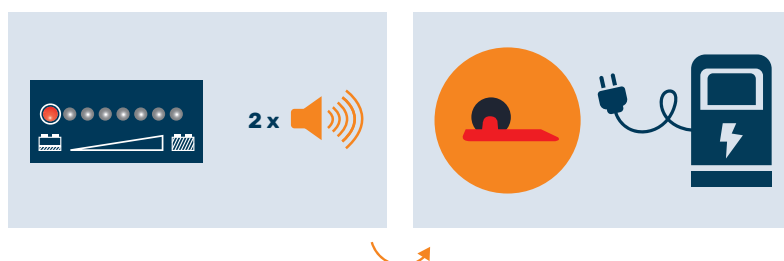
Daily maintenance (end of the day)

| Battery check | Battery empty | Cleaning |

24/7
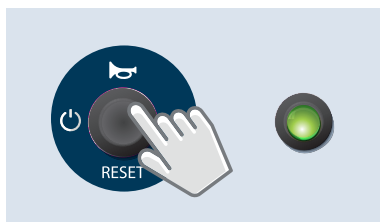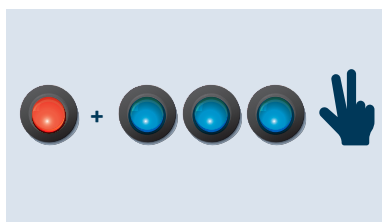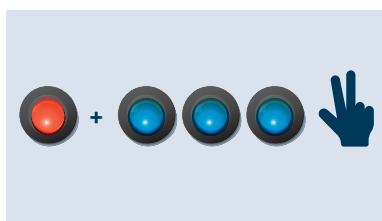
Wrong operation

Alarm

Push the reset button

Consult dealer or manual