

How to mount a new model swivel wheel 125x40mm


3041.00.0054

From October 2014 Berg Hortimotive supplied a new type swivel wheel with a larger mounting hole. Therefore it is necessary to use other connecting materials.
 The drawings below shows how the new model wheel should be mounted .

Remove the broken old model swivel wheel:



Install the new model swivel wheel with the indicated connecting materials:

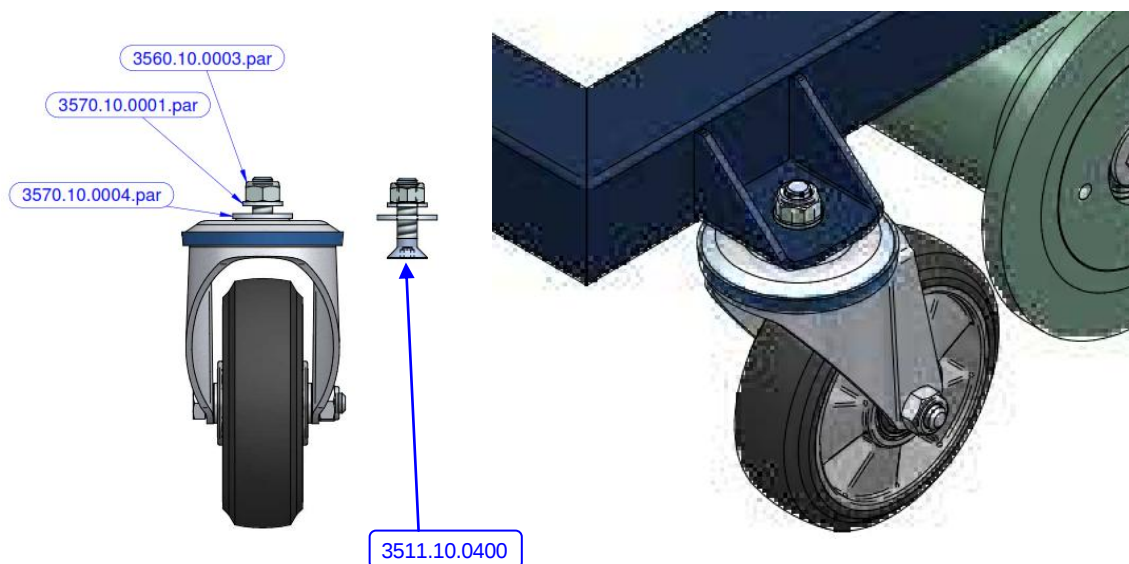

3511.10.0400
 3560.10.0003
 3570.10.0001
 3570.10.0004

countersunk bolt DIN 7991 10.9 M10x40
 locknut DIN 985 8.8 M10
 washer DIN 125A M10
 washer M10x30x2,5